

KINGSTON

KITCHEN & BATH

INSTALLATION INSTRUCTIONS

Garbage Disposal Flange

Before Installation:

Unplug your garbage disposal from the power outlet

Make sure to remove any silverware or utensils from the sink

Installation Instructions:

1. Disconnect the Garbage disposal from the drain pipe going to the "P" trap.
2. Remove garbage disposal from the sink as per manufacturer's instructions.
3. Disassemble mounting mechanism from the sink.
4. Remove original Garbage disposal flange.
5. Add a bead of silicone based caulking to the underside of the new flange and insert into the sink drain hole from the top.
6. From below attach the mounting hardware and attach garbage disposal.
7. Connect to drain pipe and plug electrical cord.
8. From above clean any excess caulking

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

⚠ DANGER

Hazardous voltage (120v).

Contact may cause electrical shock and injury.

Disconnect power before servicing

This equipment is to be serviced by trained
personnel only