


How to remove the handle on the KS3401TL:



1. Carefully insert a thin screwdriver into the gap between the top finial and the handle.

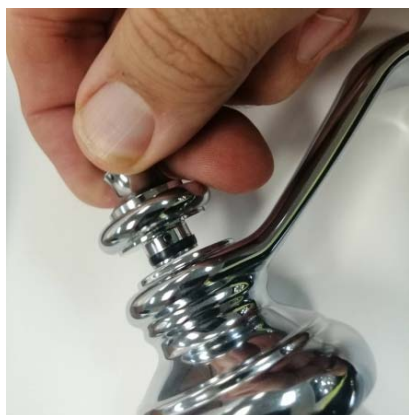

2. Once the finial is separated from the handle, pull it out.



3. Use a Phillips head screwdriver to loosen the screw.

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710