


KINGSTON BRASS

THE TRADITION OF FINE BRASS

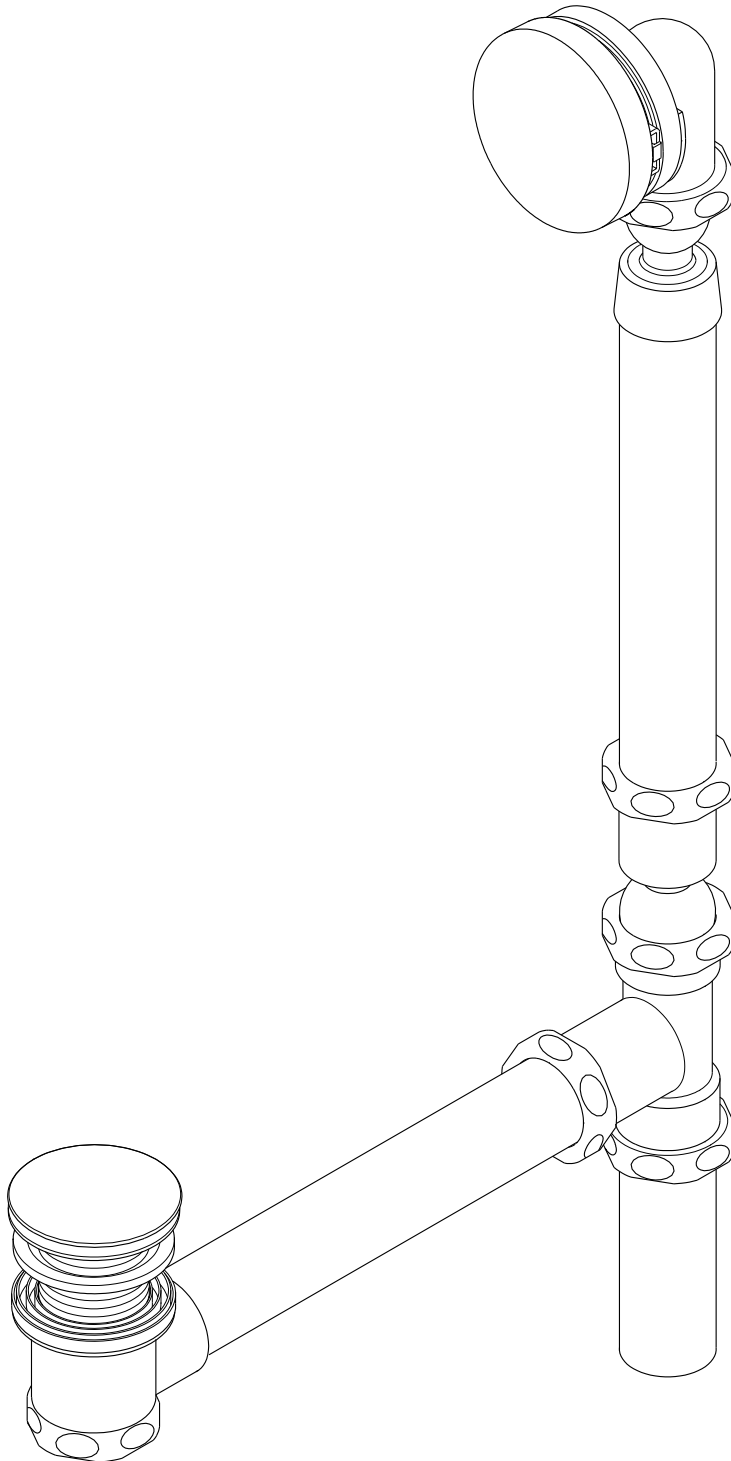

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS


TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA91710

INSTALLATION INSTRUCTIONS For Use With KB's Tub Bath Drain

Note:1. Observe all local plumbing and building codes.

TOOLS REQUIRED

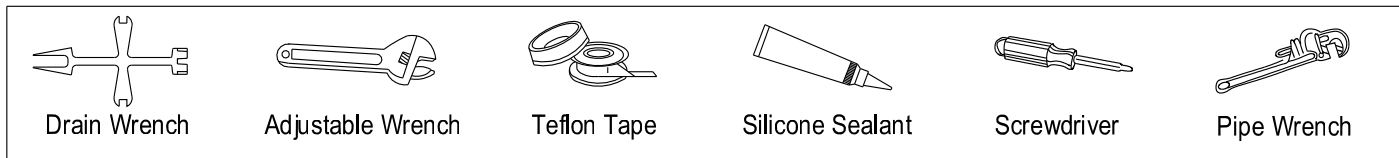

INSTALLATION INSTRUCTIONS

1. Place rubber washer (19) onto waste shoe (18), hold below the drain opening.
2. From above apply a bead of silicone base caulking on rubber washer (20) insert into waste strainer (21) and apply Teflon tape to the threads on waste strainer (21) and thread on waste shoe, clean excess caulking.
3. Select the gasket (4) that is most appropriate for your specific tub's angle, place gasket on the overflow elbow (5), while holding in place from the back secure by attaching overflow plate bracket (3) with the enclosed screw (2) overflow face plate (1) snaps onto overflow plate bracket (3).
4. Loosely insert and thread overflow tube (11) onto overflow elbow(5) and drain tube onto drain shoe (18), install "tee" (14), it may be necessary to cut one or both tubes, once the tubes have been sized accordingly, apply Teflon tape on all threads and assemble .
5. Connect to the drain system, close the drain, fill the tub past the overflow level and check for leaks, retighten any joints as necessary.

