


KINGSTON

KITCHEN & BATH

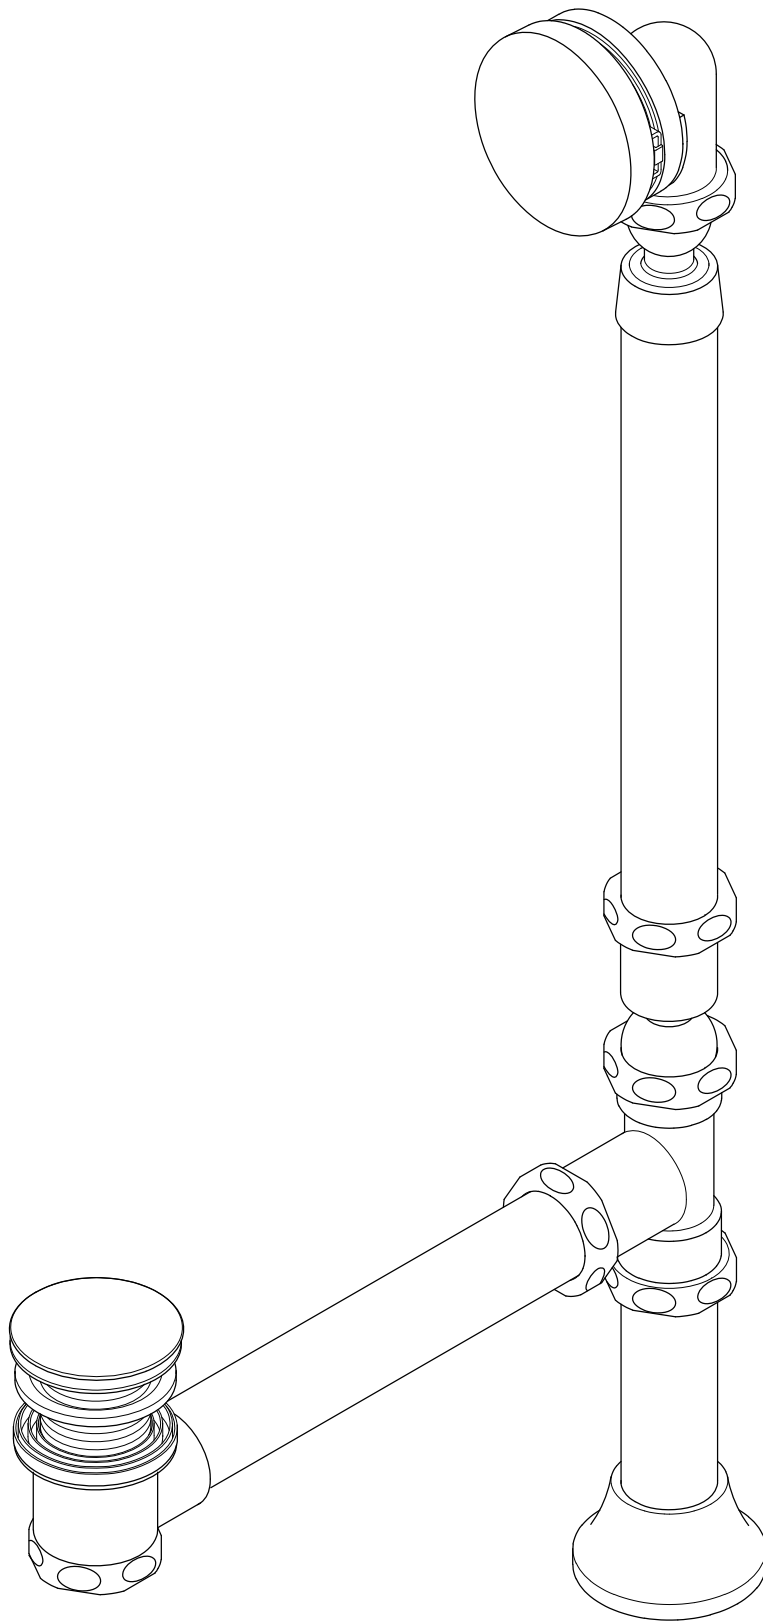

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

KINGSTON

KITCHEN & BATH


INSTALLATION INSTRUCTIONS

Bathtub Drain

Note: 1. Observe all local plumbing and building codes.

2. A pair of longer overflow screws #2-1 is included to replace #2 screws for using on the tub with thicker rubber gasket.

TOOLS REQUIRED

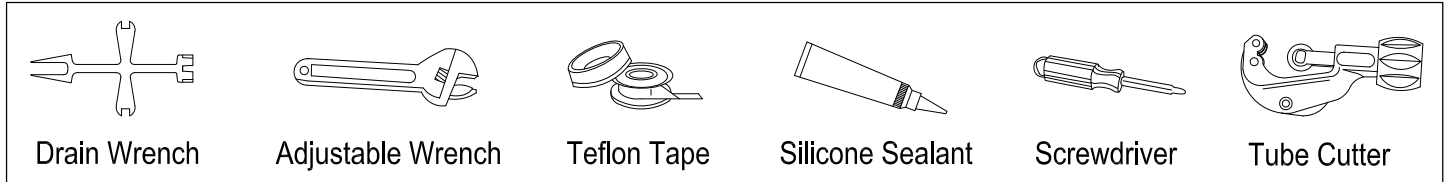

INSTALLATION INSTRUCTIONS:

1. Before installing, you need to measure the positions of overflow hole and drain hole on the tub.
2. You may need cut the tube lengths of #18 and #10 to meet the distances from overflow and drain holes to the tee #13.
3. Place rubber washer #19 onto waste shoe #18, hold below the drain opening.
4. From above apply a bead of silicone base caulking on rubber washer #20 insert into waste strainer #21 and apply Teflon tape to the threads on waste strainer #21 and thread on waste shoe, clean excess caulking.
5. Adjust the gasket #4 that is most appropriate for your specific tub's angle, while holding in place from the back secure by attaching overflow plate bracket #3 with the enclosed screw #2 overflow face plate #1 snaps onto overflow plate bracket #3.
6. Apply Teflon tape to all threads on the tee #13 and tailpiece #14.
7. Assembly all parts and make sure the drain tube #18 is horizontal with floor.
8. Adjust the angle of the overflow tube #10 and elbow #5 to fully cover up the overflow hole.
9. Tighten up all connection nuts.
10. Fill tub with water, sufficient to cover the overflow cover plate #1 check for leaks and retighten any connections as necessary.

