

# KINGSTON

KITCHEN & BATH


## INSTALLATION INSTRUCTIONS

### Tub Spout

This tub spout is designed for installation on a 1/2" (5/8" O.D.) copper pipe stub out.

#### Installation Instruction:

1. Prepare a 1/2" copper stub out to protrude from the wall 1-1/2" to 1-3/4", deburr end of the stub out and apply a light coating of petroleum jelly or similar.
2. Apply a small bead of silicone around the back of the spout.
3. Smoothly press spout onto the stub-out until fully inserted.
4. Using a Phillips head screwdriver tighten side screw and clean any excess silicone from the perimeter of the spout.

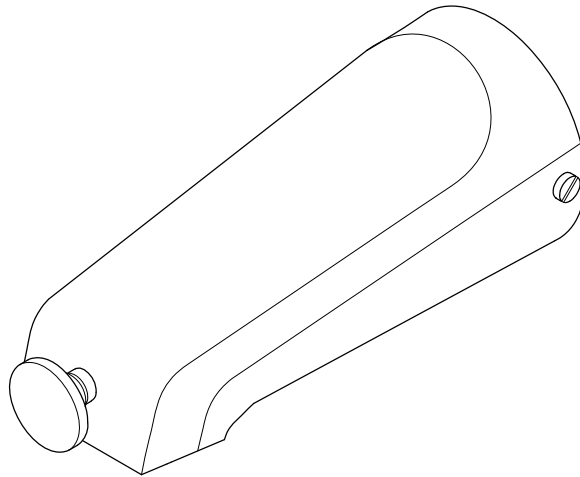

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)

12775 Reservoir Street, Chino, CA 91710

© 2021-05-T Kingston Brass