

KINGSTON

KITCHEN & BATH

INSTALLATION INSTRUCTIONS


Shower Supply Elbow

Instructions:

1. At the desired location, drill a hole $\text{\O}7/8"$ on the wall.
2. Apply silicone on the back of shower supply elbow and inset the flange.
3. Install the shower supply elbow through the hole and make sure inlet thread extrudes at least $1/2"$ from the hole.
4. Apply Teflon tape on the $1/2$ -NPT male thread and connect with a $1/2$ -14 NPT female fitting behind the wall.

Do Not Over Tighten The Thread Connection.

5. Push the flange against the wall.

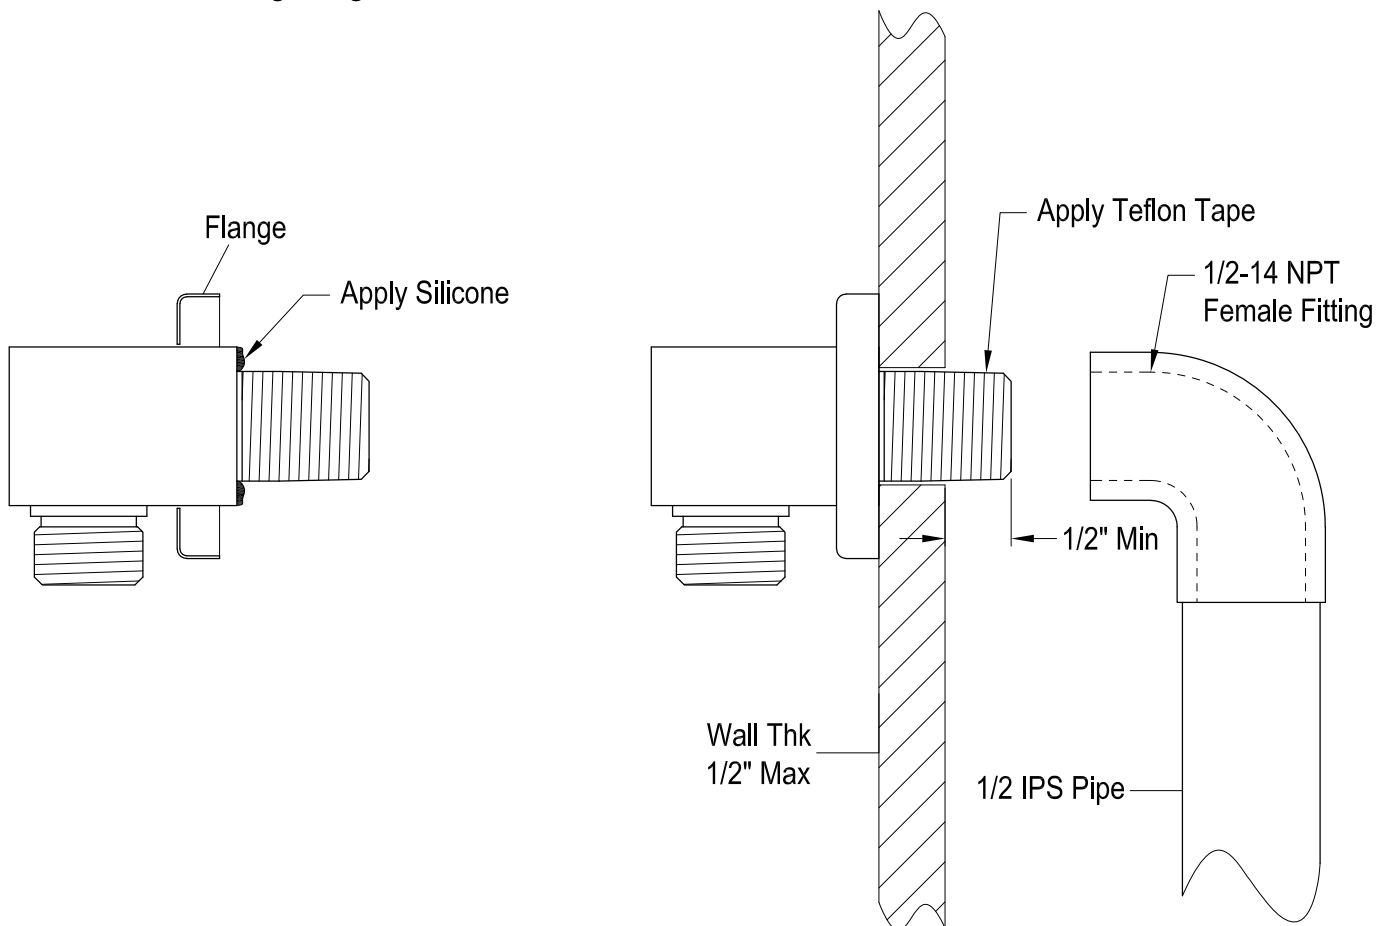

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

CAUTION

Failure to follow all installation directions may
cause product to detach from the wall and
cause serious injury