

KINGSTON KITCHEN & BATH

Tub Spout Installation

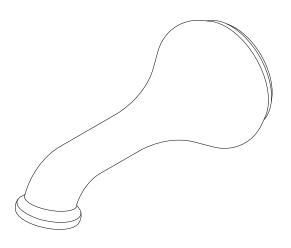

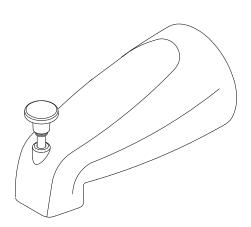

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street, Chino, CA 91710

Need Tools:







Silicone Sealant

Note: This product is used to illustrate installation.

Your product may be a different style but will install in the same wav.


Basin Wrench


Teflon Tape





1/2" IPS

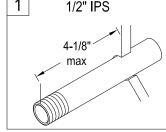


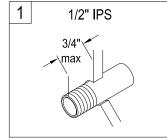



1. The stub-out pipe for spout installation must be at the length illustrated measured from the finished wall surface.

1. The stub-out pipe for spout installation must be at the length illustrated measured from the finished wall surface.

1. The stub-out pipe for spout installation must be at the length illustrated measured from the finished wall surface.

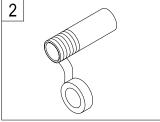

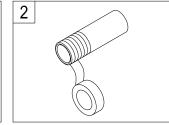


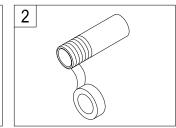



2. Apply pipe Teflon tape on the pipe nipple threads.


2. Apply pipe Teflon tape on the pipe nipple threads.

2. Apply pipe Teflon tape on the pipe nipple threads.

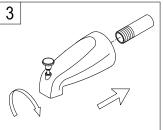

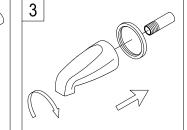

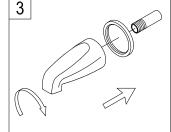

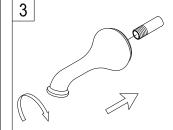

3. Slide the spout over the pipe. With the spout tight to the wall, tighten the set screw to the pipe.

3. Slide the spout and flange over the pipe. With the spout tight to the wall, tighten the set screw to the pipe.

3. Slide the spout over the pipe. With the spout tight to the wall, tighten the set screw to the pipe.