




Parts:

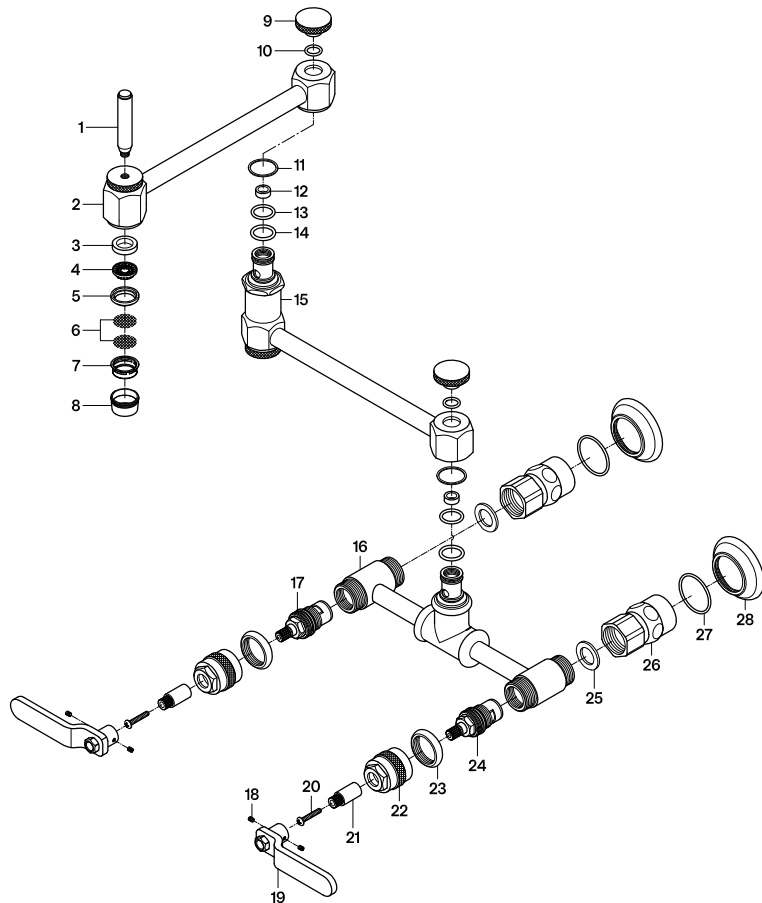

Replacement Parts:

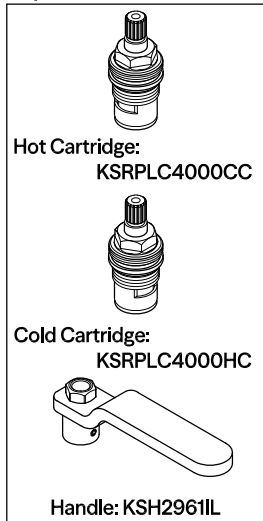

KINGSTON

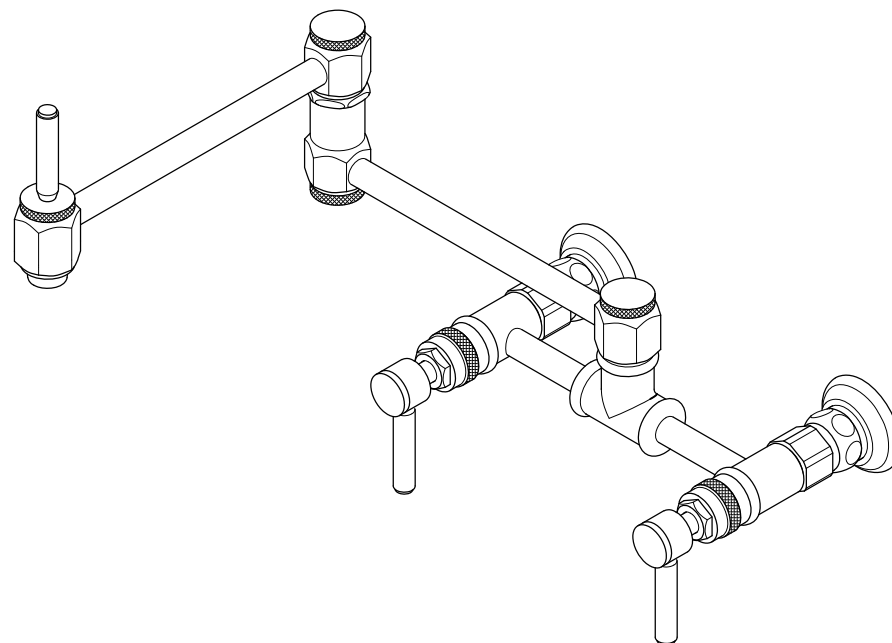

CARE AND MAINTENANCE OF YOUR FAUCET

Your KINGSTON faucet has been finished to the most strict standards; however, due to the high content of minerals in the water, your finish may appear dull and tarnished after time. These are some do's and don'ts to maintain the luster on your faucet for many years to come.

DO

1. Use a silicon based caulking when installing.
2. Clean your faucet with only a mild soap and water solution.
3. Dry your faucet after using it.
4. Give it a coat of Carnauba Wax periodically.

DON'T

1. Use plumbers putty when installing the faucet.
2. Use any abrasive cleaning agents.

It may seem like a very simple and short list but it is that simple to maintain your faucet, looking shiny and new.

If your faucet is already looking somewhat dull and tarnished, before replacing it, try cleaning it with a 50/50 solution of vinegar and water, you may need to soak some rags and wrap around those stubborn areas, leave overnight and rinse completely in the morning, apply Carnauba wax once you have removed the mineral deposits.

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks which may result in water damage

CAUTION

Failure to follow all installation directions may cause product to detach from the wall and cause serious injury

KINGSTON


INSTALLATION INSTRUCTIONS

Twin Handles Wall Mount Pot Filler

BEFORE BEGINNING INSTALLATION:


1. Flush plumbing lines to clear any debris.
2. Shut off both supply lines after flushing.

1

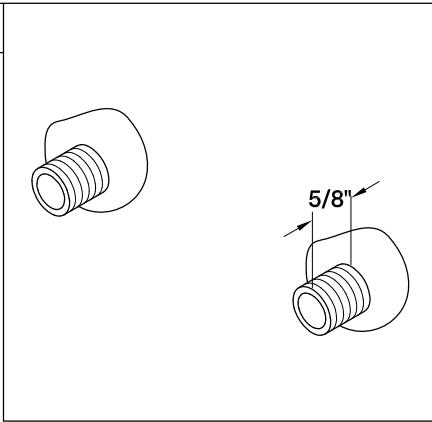


1. Plumb two 1/2-14 NPT nipples protruding from the finished wall 5/8" at 8" center to center. ($\pm 1/4$ " adjustable)

2

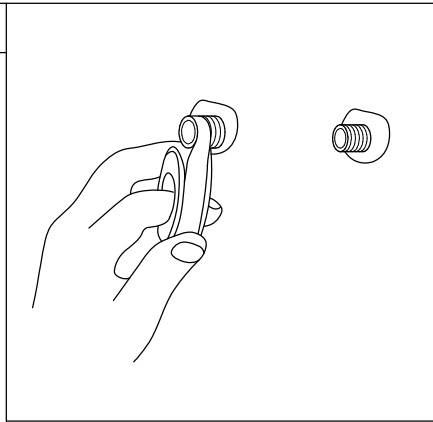


2. Apply Teflon tape onto the threads of both stub-out supply nipples.

3

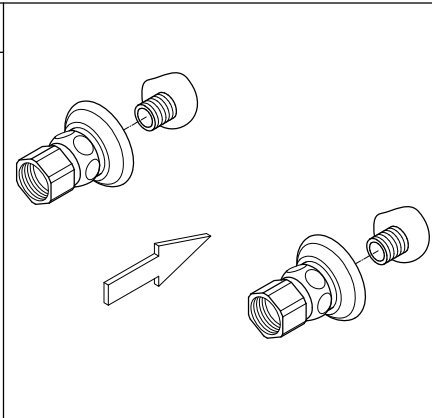

3. Remove elbows from faucet body and install to water outlet on wall with an adjustable wrench. **Do Not Over-tighten.**

4

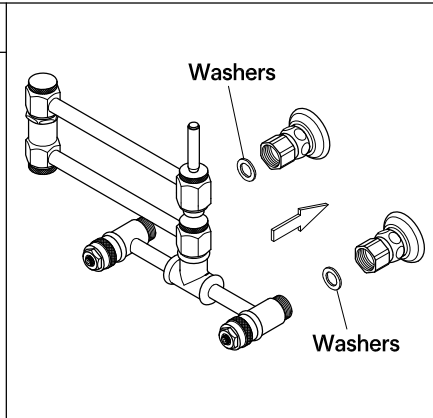

4. Before mounting the faucet onto supply elbows, apply small black washers onto both elbows.


Need Tools:



Adjustable Wrench




Teflon Tape




Screwdriver

5

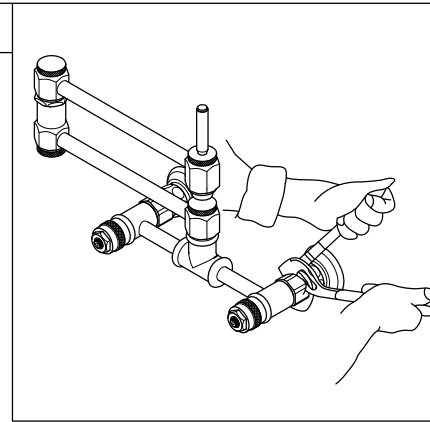


5. Install faucet body to supply elbows and gently tighten with an adjustable wrench. To prevent scratches, put a protective cloth on the Hex nuts during tightening.

6

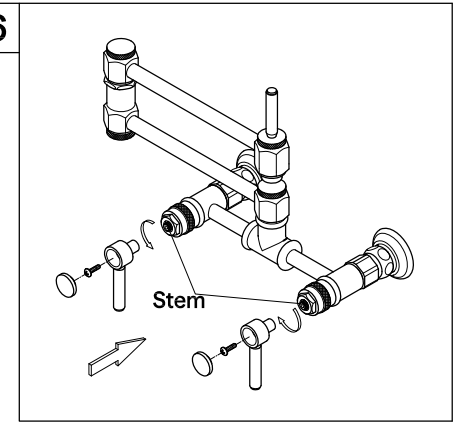

6. Before installing handles, turn both cold / hot stems to the close positions. Make sure both handles are toward down and pushed all the way into the stems before tightening up the screws.

7

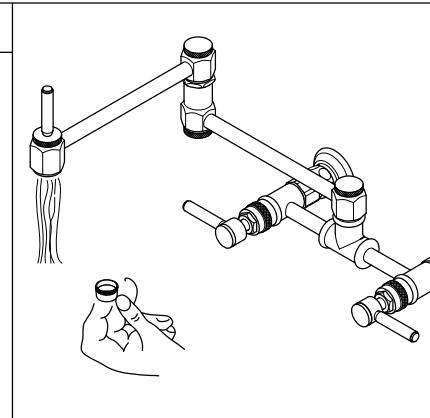

7. Remove the aerator, turn on the faucet, let water run for at least one minute, this will clear any debris left in the line, reinstall aerator.