




# Aqua Eden

ELEMENTS OF DISTINCTIVE STYLE

## Cast Iron Bath Tub Installation

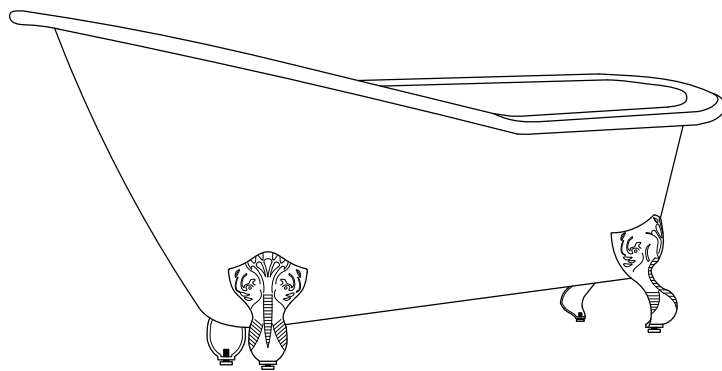

### Parts:

Bolts	Washer & Lock Nut
	
4 Pcs	4 Pcs



### **WARNING**

#### **Lifting hazard.**

Single person lift could cause injury.  
Use assistance when moving or lifting.

www.kingstonbrass.com  
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com  
12775 Reservoir Street, Chino, CA 91710

### TOOLS REQUIRED



Adjustable Wrench



Rubber Mallet

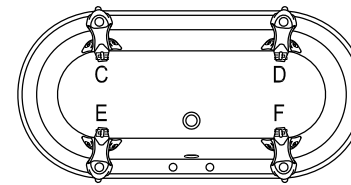


Fig. 1



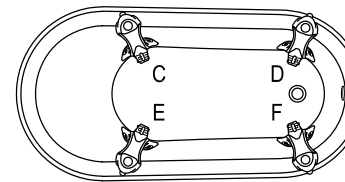


Fig. 2

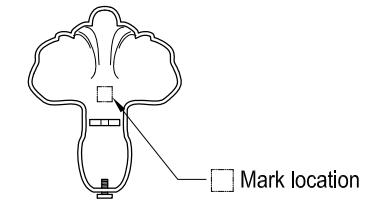

Mark location

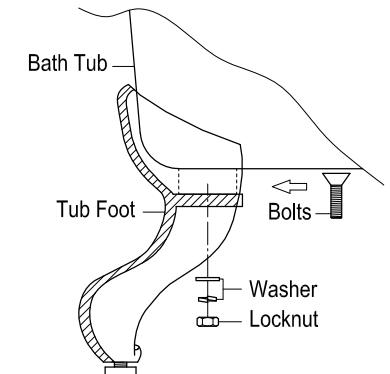

- If the tub drain is located in the center, please install the tub feet pointing in a more horizontal position (Fig 1).
- If the tub drain is located at either end of the bathtub, the tub feet need to be pointed in a more outward direction for the installation (Fig 2).

### Installation Steps:

- Step 1. Turn tub over and set on non-abrasive mat, insert pyramid bolts unto the mounting slot at the bottom of the tub.
- Step 2. Align the feet with the bolt, insert leg, washers and nut and tighten loosely, the legs marked "CE" are to be installed in the tub mark "C" & "E", and the legs marked "DF" are to be installed in the tub mark "D" & "F". When all 4 feet have been installed, tighten the bolts and check the fit.
- Step 3. Adjust leg for proper fit, it might be necessary to tap with rubber mallet to insure a good position.
- Step 4. Retighten bolts.
- Step 5. When all four legs have been installed, turn tub over carefully as not to damage the finish.
- Step 6. If tub wobbles, adjust leg by raising or lowering leg adjustment bolt at the bottom of each leg.

### Cleaning

Clean with a damp cloth only.  
Avoid using metal or abrasive polishes.